

## Low voltage battery

Inverter Brand	Inverter logo	Inverter Type	DyNESS Battery Series								
			B4850	B3	B51100	A48100	DL5.0C	BX51100	Powerbox Fseries Powerbox Pro	Powercube series B4850/B3/B51100	PowerDepot H2.5/H5/H5B
Goodwe		GW3648D/5048D-ES/EM/BP/SBP GW3K/5K-ES G2/SBP G2	✓	✓	✓	✓	✓	✓	✓	✓	✓
Growatt (SANKO/Socar)		SPA/SPH3000/3600/4000/4600/5000/6000 (High Frequency) SPF 5000TL HVM-P/SPF 3000TL (Power frequency) HVM-P/ SPF 12KT HVM (High Frequency) M3000H-48, M5000H-48, M5000H-48BP (Power frequency) M12000L-48, M12000L-48SP (4KW/5KW/6KW/8KW/10KW/12KW) SPF 5000ES	✓	✓	✓	✓	✓	✓	✓	✓	✓
Solis		S5-EH1P(3-6)-L RHI-3K/3.6K/5K-48ES/RHI-3K-48ES-5G /RHI-3.6K-48ES-5G/RHI-5K-48ES-5G /RHI-6K-48ES-5G S5-EH1P(3-6)-L S6-EH1P6K-L-EU S6-EH1P6/8K-L-PRO DYNE 6.0L/8.0L-1P-A	✓	✓	✓	✓	✓	✓	✓	✓	✓
SAJ		Sunfree Series/ H1-3k-S2	✓	✓	✓	✓	✓	✓	✓	✓	✓
SUNGROW		SH5K-30	✓	✓	✓	✓	✓	✓	✓	✓	✓
DEYE		SUNSYNK PARITYINVERTER 5000W/ 7600W/8000W/ SUN-3.6/5/6K-SG03LP1-EU SUN-3/3.6/5/6K-SG04LP1-EU SUN-5/6/8/10/12K-SG04LP3-EU SUN-3.6/5/6/7.6/8K-SG05LP1-EU SUN-5/6K-SG01LP1-US SUN-7.6/8K-SG01LP1-US/EU SUN-12/14/16K-SG01LP1-EU	✓	✓	✓	✓	✓	✓	✓	✓	✓
AISHIWEI		ASW3000/3680/4000/5000/6000H-S2	✓	✓	✓	✓	✓	✓	✓	✓	✓
Luxpower		LXP 3K/3.6K/4K/4.6K/5K Hybrid LXP 3600 ACS series/SNA5K(off-grid)	✓	✓	✓	✓	✓	✓	✓	✓	✓
MUST		PV18 2-5.5kW /PH18 2-5.5KW	✓	✓	✓	✓	✓	✓	✓	✓	✓
TBB		Kinergier Pro CK8.0S	✓	✓	✓	✓	✓	✓	✓	✓	✓

Note: Only the inverters listed above are approved to be connected to dyNESS batteries.

## Low voltage battery

Inverter Brand	Inverter logo	Inverter Type	DyNESS Battery Series									
			B4850	B3	B51100	A48100	DL5.0C	BX51100	Powerbox Fseries Powerbox Pro	Powercube series B4850/B3/B51100	PowerDepot H2.5/H5/H5B	
Victron		Multiplus/Quattro 48	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
IMEON		IMEON 3.6/9.12	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
SMA		SI 4.4M /6.0H/8.0H-12	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
DELIOS		DLS-300C/DLS-450C/DLS-600C	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Studer Innotec		Xtender 48V serie VarioString serie VarioTrack 48V serie	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Sorotec		REVO II 3.2K-48 /REVO II 5.5K-48 /REVO VM II 5.5KW	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
SERMATEC		SMT-5K-TL-LV	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
SOFAR		HYD3000-ES	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
INFINI /VOLTRONIC		Infinisolar series 48V /Axpert-King series48V with communication Card (Power frequency)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
INFINI /VOLTRONIC (MERCER)		Axpert-King MKS Modbus Duo Box /Axpert-King VM (RS485 PN-protocol) ICC	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
MAGAREVO		R5KL1	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
SUNRAY		MPS series 1/3/5kva	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
GMDE		3700TL	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
RENAC		ESC5000-DS	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Ingeteam		INGECON SUN STORAGE 1PLAY 3/6 TL M	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓




Note: Only the inverters listed above are approved to be connected to dyNESS batteries.

Low voltage battery






Inverter Brand	Inverter logo	Inverter Type	Dyness Battery Series									
			B4850	B3	B51100	A48100	DL5.0C	BX51100	Powerbox Fseries Powerbox Pro	Powercube series B4850/B3/B51100	PowerDepot H2.5/H5/H5B	
Homiles		HYS/HAS-LV Series/HYS-LV-USG1	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Afore		AF6K-SL	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Amensolar		N3H-X8.0-US	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Senergy		SE 5000HB-100	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
LIVOLTEK		GF1-5K48S1	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
TSUN		TSOL-H5.0K-H	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Autarco		S2.MH(3000-6000) S2.MH6000-MII	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
HYPDNTECH		HES-3~6KW	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Steca		Solarix PLI 5000-48	Under Test (90% completed)									
Schneider		Conext Series Products/ Conext XW Pro	Under Test (90% completed)									
SRNE		HF4850S80	Under Test (80% completed)									

Note: Only the inverters listed above are approved to be connected to dyness batteries.

## Low voltage battery -12V

Inverter Brand	Inverter logo	Inverter Type	Dyness Battery Series	
			RV12100	Rv12200
Steca		Steca Solarix PI 550-12	✓	✓
MUST		PV18-1012 VPK/VPM EP18-1012	✓	✓
Victron		MultiPlus 12/3000/120-16 230V	✓	✓

## Low voltage battery -24V

Inverter Brand	Inverter logo	Inverter Type	Dyness Battery Series
			B25100
Steca		Steca Solarix PI 550-24 Steca Solarix PI 1100-24	✓
Sorotec		REVO VM II 3.5KW	✓
Victron		MultiPlus 24/5000/120-100 230V	✓
Growatt (SANKO/Socar)		SPF 3000TL HVM-24	✓
MUST		PV18-2024 VHM\VPK\VPM\LHM PV18-3024 VHM\VPK\VPM\LHM PV18-3024 Pro /EP18-2024/EP18-3024/ PV18-1024 LHM/PV18-1524 LHM/ PV18-2524 LHM/PH18-2024 PLUS/ PH18-3024 PLUS/PH18-3024 Pro	✓

Note: Only the inverters listed above are approved to be connected to dyness batteries.

High voltage battery

Inverter Brand	Inverter logo	Inverter Type	DyNESS Battery Series			
			HV4850	HV4875	HV51100	Tower Series
Goodwe		GW3K/5K/6K/10K-EH/ET EHB	✓	✓	✓	✓
Growatt		SPH 10000TL3 BH/SPA 4000	✓	✓	✓	✓
SERMATEC		SMT-10K-TL-TH	✓	✓	✓	✓
ATESS		HPS 5000/7500/10000TSL HPS 30/50/100/120/150	✓	✓	✓	✓
Solis		RHI-3P(5-10)K-HVES-5G RHI-1P7.6K-HVES-5G S6-EH3P10K-H(PRO) S6-EH1P(3.8-11.4)K-H-US S6-EH3P(5-10)K2-H	✓	✓	✓	✓
Hoymiles		HY3 Series/HYT-10.0HV-EUGI	✓	✓	✓	✓
Ecactus		WH-SPA-3.6H/WH-SPA-5.0H	✓	✓	✓	✓
Sinexcel		PWS1-50K/PWG2-100K	✓	✓	✓	✓
Sofar		HYD 15KTL-3PH/ HYD 5K~20KTL-3PH	✓	✓	✓	✓
Sunways		STH-4K~12KTL-HT-P STH-12KTL-HT-CN	✓	✓	✓	✓
Thinkpower		EPH12KTL	✓	✓	✓	✓
HYPONTECH		HHS-3680/5000 HHT-5K-12K	✓	✓	✓	✓
SAJ		H2-5K/6K/8K/10-T2	✓	✓	✓	✓
Bluesun		BSE12KH1NA	✓	✓	✓	✓
DEYE		SUN-6-20K-SG01HP3-EU-AM2 SUN-50K-SG01HP3-EU-BM4	✓	✓	✓	✓
MEGAREVO		RKH1/RKH3	✓	✓	✓	✓
LUXPOWER		LXP-PCS6T	Can work with H8025 battery module series. Other battery model under Test. ✓			

**Note:** This high voltage list covers all DyNESS energy storage products. The specific type of high-voltage batteries that the inverter can be connected to are listed in the appendix. The HV series single cluster supports up to 16 modules in series, If the customer has a customized project, please communicate with our pre-sales technical support in advance to confirm. Only the inverters listed above are approved to be connected to dyNESS batteries.

## High voltage battery

Inverter Brand	Inverter logo	Inverter Type	DyNESS Battery Series			
			HV4850	HV4875	HV51100	Tower Series
Ingeteam		INGECON SUN STORAGE 1 PLAY TL M 3-6kW INGECON SUN STORAGE 100TL	✓	✓	✓	✓
KOYOE		KY-EST-10KH	✓	✓	✓	✓
MEGAREVO		MEGA0100TS	✓	✓	✓	✓
SOLINTEG		MHT-4~12K-25/MHT-10~20K-40 MHS-3~8K-30	✓	✓	✓	✓
AISHIWEI		ASW08KH-T1/ASW10KH-T1/ASW12KH-T1	✓	✓	✓	✓
Afore		AF3K/9.6K-DH AF3K/30K-TH	✓	✓	✓	✓
SINENG		SN-3.0/3.6/4.0/5.0/6.0HS	✓	✓	✓	✓
Autarco		S2.LH(5000-10000) S2.LH(5000-10000)-MII	✓	✓	✓	✓
KOSTAL		PLENTICORE plus 3.0~10 PLENTICORE plus-G2 3.0~10	✓	✓	✓	✓
TSUN		TSOL-H Series	Under Test (90% completed)			


**Note: This high voltage list covers all DyNESS energy storage products. The specific type of high-voltage batteries that the inverter can be connected to are listed in the appendix.**  
 The HV series single cluster supports up to 16 modules in series, If the customer has a customized project, please communicate with our pre-sales technical support in advance to confirm.  
 Only the inverters listed above are approved to be connected to dyNESS batteries.

 High voltage battery

 GOODWE Inverter.

Battery Series	Battery Model	Inverter Series				
		Goodwe				
		ET (5K~10K)	BT (5K~10K)	EH (3K~6K)	BH (3K~6K)	EHB
Tower	T7			√	√	√
	T10	√	√	√	√	√
	T14	√	√	√	√	√
	T17	√	√			
	T21					
HV1	HV1-9			√	√	√
	HV1-12	√	√	√	√	√
	HV1-14	√	√	√	√	√
	HV1-16	√	√	√	√	√
	HV1-19	√	√	√	√	√
	HV1-21	√	√			
	HV1-24	√	√			
	HV1-26	√	√			
	HV1-28					
	HV1-31					
	HV1-33					
HV1-36						
HV2	HV2-14			√	√	√
	HV2-18	√	√	√	√	√
	HV2-21	√	√	√	√	√
	HV2-25	√	√	√	√	√
	HV2-28	√	√	√	√	√
	HV2-32	√	√			
	HV2-36	√	√			
HV2-39	√	√				
HV4	HV4-20			√	√	√
	HV4-25	√	√	√	√	√
	HV4-30	√	√	√	√	√
	HV4-35	√	√	√	√	√
	HV4-40	√	√	√	√	√
	HV4-46	√	√			
	HV4-51	√	√			
HV4-56						

Note: The HV series is matched with GOODWE inverters, and the battery model needs to be selected as "default".

 **High voltage battery**  
 Growatt, ATESS, SERMATEC Inverter.

Battery Series	Battery Model	Inverter Series					
		Growatt		ATESS		SERMATEC	
		SPH4K~10 KTL3BH	SPA 4K~10K	HPS 5K-10K TL	HPS 30~150	SMT-10K -TL-TH	SolarE- 60KSZ
Tower	T7	√	√				
	T10	√	√			√	
	T14	√	√	√		√	
	T17	√	√	√	√	√	
	T21			√		√	
HV1	HV1-9	√	√				
	HV1-12	√	√			√	
	HV1-14	√	√			√	
	HV1-16	√	√	√		√	
	HV1-19	√	√	√		√	
	HV1-21	√	√	√	√	√	
	HV1-24	√	√	√	√	√	
	HV1-26			√	√	√	
	HV1-28			√		√	
	HV1-31			√		√	
	HV1-33					√	
	HV1-36					√	
HV2	HV2-14	√	√				
	HV2-18	√	√			√	
	HV2-21	√	√			√	
	HV2-25	√	√	√		√	
	HV2-28	√	√	√		√	
	HV2-32	√	√	√	√	√	
	HV2-36	√	√	√	√	√	
	HV2-39			√	√	√	
HV4	HV4-20	√	√			√	
	HV4-25	√	√			√	
	HV4-30	√	√			√	
	HV4-35	√	√	√		√	
	HV4-40	√	√	√	√	√	
	HV4-46	√	√	√	√	√	
	HV4-51			√	√	√	
	HV4-56			√		√	



High voltage battery

Solis Inverter.

Battery Series	Battery Model	Inverter Series				
		Solis				
		RHI-3P(5-10)K-HVES-5G	RHI-1P7.6K-HVES-5G	S6-EH3P10K-H(P RO)	S6-EH1P(3.8-11.4)K-H-US	S6-EH3P(5-10)K2-H
Tower	T7	✓	✓	✓	✓	✓
	T10	✓	✓	✓	✓	✓
	T14	✓	✓	✓	✓	✓
	T17	✓		✓		✓
	T21					
HV1	HV1-9	✓	✓	✓	✓	✓
	HV1-12	✓	✓	✓	✓	✓
	HV1-14	✓	✓	✓	✓	✓
	HV1-16	✓	✓	✓	✓	✓
	HV1-19	✓	✓	✓	✓	✓
	HV1-21	✓	✓	✓	✓	✓
	HV1-24	✓		✓		✓
	HV1-26	✓		✓		✓
	HV1-28					
	HV1-31					
	HV1-33					
HV1-36						
HV2	HV2-14	✓	✓	✓	✓	✓
	HV2-18	✓	✓	✓	✓	✓
	HV2-21	✓	✓	✓	✓	✓
	HV2-25	✓	✓	✓	✓	✓
	HV2-28	✓	✓	✓	✓	✓
	HV2-32	✓	✓	✓	✓	✓
	HV2-36	✓		✓		✓
	HV2-39	✓		✓		✓
HV4	HV4-20	✓	✓	✓	✓	✓
	HV4-25	✓	✓	✓	✓	✓
	HV4-30	✓	✓	✓	✓	✓
	HV4-35	✓	✓	✓	✓	✓
	HV4-40	✓	✓	✓	✓	✓
	HV4-46	✓		✓		✓
	HV4-51	✓		✓		✓
	HV4-56					


**High voltage battery**

☐ Bluesun 、 HYPONTECH、 Sinexcel Inverter.

Battery Series	Battery Model	Inverter Series				
		Bluesun	HYPONTECH		Sinexcel	
		BSE12KH 1NA	HHS- 3680/5000	HHT- 5K-12K	PWS1-5 0K~250 K	PWG2-50 K/100K-C N
Tower	T7	√	√	√		
	T10	√	√	√		√
	T14		√	√		√
	T17			√		
	T21			√	√	
HV1	HV1-9	√	√	√		
	HV1-12	√	√	√		
	HV1-14	√	√	√		√
	HV1-16	√	√	√		√
	HV1-19		√	√		√
	HV1-21		√	√		√
	HV1-24			√		
	HV1-26			√		
	HV1-28			√	√	
	HV1-31			√	√	
	HV1-33			√	√	
HV1-36				√		
HV2	HV2-14	√	√	√		
	HV2-18	√	√	√		
	HV2-21	√	√	√		√
	HV2-25	√	√	√		√
	HV2-28		√	√		√
	HV2-32		√	√		√
	HV2-36			√		
	HV2-39			√		
HV4	HV4-20	√	√	√		
	HV4-25	√	√	√		
	HV4-30	√	√	√		√
	HV4-35	√	√	√		√
	HV4-40		√	√		√
	HV4-46			√		√
	HV4-51			√		
	HV4-56			√	√	



## High voltage battery

## □ Hoymiles Inverter.

Battery Series	Battery Model	Inverter Series		
		Hoymiles		
		HY3 5K~10K HV	HYT-5.0~12.0H V-EUG1	HAT-5.0~10.0HV-E UG1
Tower	T7	√		
	T10	√	√	√
	T14	√	√	√
	T17		√	√
	T21			
HV1	HV1-9	√		
	HV1-12	√	√	√
	HV1-14	√	√	√
	HV1-16	√	√	√
	HV1-19	√	√	√
	HV1-21	√	√	√
	HV1-24		√	√
	HV1-26		√	√
	HV1-28			
	HV1-31			
	HV1-33			
	HV1-36			
HV2	HV2-14	√		
	HV2-18	√	√	√
	HV2-21	√	√	√
	HV2-25	√	√	√
	HV2-28	√	√	√
	HV2-32	√	√	√
	HV2-36		√	√
	HV2-39		√	√
HV4	HV4-20	√	√	√
	HV4-25	√	√	√
	HV4-30	√	√	√
	HV4-35	√	√	√
	HV4-40	√	√	√
	HV4-46		√	√
	HV4-51		√	√
	HV4-56			

 High voltage battery

□ Ecactus 、 Sunways 、 Sofar Inverter.

Battery Series	Battery Model	Inverter Series				
		Ecactus		Sunways		Sofar
		WH-SPA-3.6/5.0H	WH-SHC 362~602	STH-3~8KTL-HS	STH-4~12KT L-HT	HYD 5K~20K TL-3PH
Tower	T7	√	√	√		
	T10	√	√	√	√	√
	T14	√	√	√	√	√
	T17				√	√
	T21				√	√
HV1	HV1-9	√	√	√		
	HV1-12	√	√	√	√	√
	HV1-14	√	√	√	√	√
	HV1-16	√	√	√	√	√
	HV1-19	√	√	√	√	√
	HV1-21		√	√	√	√
	HV1-24				√	√
	HV1-26				√	√
	HV1-28				√	√
	HV1-31				√	√
	HV1-33				√	√
HV1-36				√	√	
HV2	HV2-14	√	√	√		
	HV2-18	√	√	√	√	√
	HV2-21	√	√	√	√	√
	HV2-25	√	√	√	√	√
	HV2-28	√	√	√	√	√
	HV2-32		√	√	√	√
	HV2-36				√	√
HV4	HV4-20	√	√	√	√	√
	HV4-25	√	√	√	√	√
	HV4-30	√	√	√	√	√
	HV4-35	√	√	√	√	√
	HV4-40	√	√	√	√	√
	HV4-46				√	√
	HV4-51				√	√
	HV4-56				√	√



## High voltage battery

□ Thinkpower 、 KOYOE 、 Megarevo Inverter.

Battery Series	Battery Model	Inverter Series				
		Thinkpower	KOYOE	Megarevo		
		EPH 4K~12KTL	KY-EST-6K ~10KH	R5K~11 K4 H1	R6K~12 K H3	MEGA010 OTS
Tower	T7			√	√	
	T10	√	√	√	√	
	T14	√	√		√	
	T17	√	√		√	√
	T21	√				√
HV1	HV1-9			√	√	
	HV1-12	√	√	√	√	
	HV1-14	√	√	√	√	
	HV1-16	√	√	√	√	
	HV1-19	√	√		√	
	HV1-21	√	√		√	
	HV1-24	√	√		√	√
	HV1-26	√			√	√
	HV1-28	√				√
	HV1-31					√
	HV1-33					√
HV1-36					√	
HV2	HV2-14			√	√	
	HV2-18	√	√	√	√	
	HV2-21	√	√	√	√	
	HV2-25	√	√	√	√	
	HV2-28	√	√		√	
	HV2-32	√	√		√	
	HV2-36	√	√		√	√
HV2-39	√			√	√	
HV4	HV4-20	√		√	√	
	HV4-25	√	√	√	√	
	HV4-30	√	√	√	√	
	HV4-35	√	√	√	√	
	HV4-40	√	√		√	
	HV4-46	√	√		√	
	HV4-51	√			√	√
HV4-56	√				√	



## High voltage battery

□ SAJ 、 Ingeteam Inverter.

Battery Series	Battery Model	Inverter Series			
		SAJ		Ingeteam	
		H2-3K~6K-S2	H2-5K~10K-T2	INGECON SUN STORAGE1 PLAY TL M 3~6 kW	INGECON SUN STORAGE 100TL
Tower	T7	√		√	
	T10	√	√	√	
	T14	√	√	√	
	T17		√		
	T21				
HV1	HV1-9	√		√	
	HV1-12	√	√	√	
	HV1-14	√	√	√	
	HV1-16	√	√	√	
	HV1-19	√	√	√	
	HV1-21		√		
	HV1-24		√		
	HV1-26		√		
	HV1-28				
	HV1-31				
	HV1-33				√
HV1-36				√	
HV2	HV2-14	√		√	
	HV2-18	√	√	√	
	HV2-21	√	√	√	
	HV2-25	√	√	√	
	HV2-28	√	√	√	
	HV2-32		√		
	HV2-36		√		
	HV2-39		√		
HV4	HV4-20	√		√	
	HV4-25	√	√	√	
	HV4-30	√	√	√	
	HV4-35	√	√	√	
	HV4-40	√	√		
	HV4-46		√		
	HV4-51		√		
	HV4-56				

 High voltage battery

 SOLINTEG Inverter.

Battery Series	Battery Model	Inverter Series			
		SOLINTEG			
		MHT-50K-100	MHT-4~12K-25	MHT10K~20K-40	MHS-3K~8K-30
Tower	T7	√	√	√	√
	T10	√	√	√	√
	T14	√	√	√	√
	T17	√	√	√	
	T21	√	√	√	
HV1	HV1-9	√	√	√	√
	HV1-12	√	√	√	√
	HV1-14	√	√	√	√
	HV1-16	√	√	√	√
	HV1-19	√	√	√	√
	HV1-21	√	√	√	
	HV1-24	√	√	√	
	HV1-26	√	√	√	
	HV1-28	√	√	√	
	HV1-31	√	√	√	
	HV1-33				
HV1-36					
HV2	HV2-14	√	√	√	√
	HV2-18	√	√	√	√
	HV2-21	√	√	√	√
	HV2-25	√	√	√	√
	HV2-28	√	√	√	√
	HV2-32	√	√	√	
	HV2-36	√	√	√	
	HV2-39	√	√	√	
HV4	HV4-20	√	√	√	√
	HV4-25	√	√	√	√
	HV4-30	√	√	√	√
	HV4-35	√	√	√	√
	HV4-40	√	√	√	√
	HV4-46	√	√	√	
	HV4-51	√	√	√	
	HV4-56	√	√	√	



## High voltage battery

□ Deye, Solplanet Inverter.

Battery Series	Battery Model	InverterSeries			
		Deye		Solplanet	
		SUN-6K~15 K-SG01HP3 -EU-AM2	SUN-25/30/35/ 40/50K-SG01 HP3-EU-BM2/ 3/4	ASW08/ 10/12K H-T1	ASW08/ 10/12KH -T3
Tower	T7	√	√	√	√
	T10	√	√	√	√
	T14	√	√	√	√
	T17	√	√	√	√
	T21	√	√		
HV1	HV1-9	√	√	√	√
	HV1-12	√	√	√	√
	HV1-14	√	√	√	√
	HV1-16	√	√	√	√
	HV1-19	√	√	√	√
	HV1-21	√	√	√	√
	HV1-24	√	√	√	√
	HV1-26	√	√	√	√
	HV1-28	√	√		
	HV1-31		√		
	HV1-33		√		
HV1-36					
HV2	HV2-14	√	√	√	√
	HV2-18	√	√	√	√
	HV2-21	√	√	√	√
	HV2-25	√	√	√	√
	HV2-28	√	√	√	√
	HV2-32	√	√	√	√
	HV2-36	√	√	√	√
HV2-39	√	√	√	√	
HV4	HV4-20	√	√	√	√
	HV4-25	√	√	√	√
	HV4-30	√	√	√	√
	HV4-35	√	√	√	√
	HV4-40	√	√	√	√
	HV4-46	√	√	√	√
	HV4-51	√	√	√	√
HV4-56	√	√			



 High voltage battery

□ RENAC , Autarco Inverter.

Battery Series	Battery Model	Inverter Series			
		RENAC	Autarco		SINENG
		N3-HV-5.0/6.0/8.0/10.0	S2.LH5K/6K/8K/10K	LH5K/6K/8K/10K-MII	SN-3.0/3.6/4.0/5.0/6.0 HS
Tower	T7	√	√	√	√
	T10	√	√	√	√
	T14	√	√	√	√
	T17	√	√	√	
	T21	√			
HV1	HV1-9	√	√	√	√
	HV1-12	√	√	√	√
	HV1-14	√	√	√	√
	HV1-16	√	√	√	√
	HV1-19	√	√	√	√
	HV1-21	√	√	√	
	HV1-24	√	√	√	
	HV1-26	√	√	√	
	HV1-28	√			
	HV1-31				
	HV1-33				
HV1-36					
HV2	HV2-14	√	√	√	√
	HV2-18	√	√	√	√
	HV2-21	√	√	√	√
	HV2-25	√	√	√	√
	HV2-28	√	√	√	
	HV2-32	√	√	√	
	HV2-36	√	√	√	
HV4	HV4-20	√	√	√	√
	HV4-25	√	√	√	√
	HV4-30	√	√	√	√
	HV4-35	√	√	√	√
	HV4-40	√	√	√	
	HV4-46	√	√	√	
	HV4-51	√	√	√	
	HV4-56	√			

High voltage battery

□ Kostal Inverter.

Battery Series	Battery Model	InverterSeries			
		Kostal			
		PLENTICORE plus 3.0~10	PLENTICORE plus-G2 3.0~10	PLENTICORE BI 5.5/10-26	PLENTICORE BI-G2 5.5/10-26
Tower	T7	√	√	√	√
	T10	√	√	√	√
	T14	√	√	√	√
	T17	√	√	√	√
	T21				
HV1	HV1-9				
	HV1-12				
	HV1-14				
	HV1-16				
	HV1-19				
	HV1-21				
	HV1-24				
	HV1-26				
	HV1-28				
	HV1-31				
	HV1-33				
	HV1-36				
HV2	HV2-14				
	HV2-18				
	HV2-21				
	HV2-25				
	HV2-28				
	HV2-32				
	HV2-36				
HV4	HV4-20				
	HV4-25				
	HV4-30				
	HV4-35				
	HV4-40				
	HV4-46				
	HV4-51				
	HV4-56				



## High voltage battery

## □ Afore Inverter.

Battery Series	Battery Model	InverterSeries			
		Afore			
		AF3K~9 .6K-DH	AF3K~30 K-TH		
Tower	T7	√	√		
	T10	√	√		
	T14	√	√		
	T17		√		
	T21		√		
HV1	HV1-9	√	√		
	HV1-12	√	√		
	HV1-14	√	√		
	HV1-16	√	√		
	HV1-19	√	√		
	HV1-21	√	√		
	HV1-24		√		
	HV1-26		√		
	HV1-28		√		
	HV1-31		√		
	HV1-33		√		
	HV1-36				
HV2	HV2-14	√	√		
	HV2-18	√	√		
	HV2-21	√	√		
	HV2-25	√	√		
	HV2-28	√	√		
	HV2-32	√	√		
	HV2-36		√		
	HV2-39		√		
HV4	HV4-20	√	√		
	HV4-25	√	√		
	HV4-30	√	√		
	HV4-35	√	√		
	HV4-40	√	√		
	HV4-46		√		
	HV4-51		√		
	HV4-56		√		